






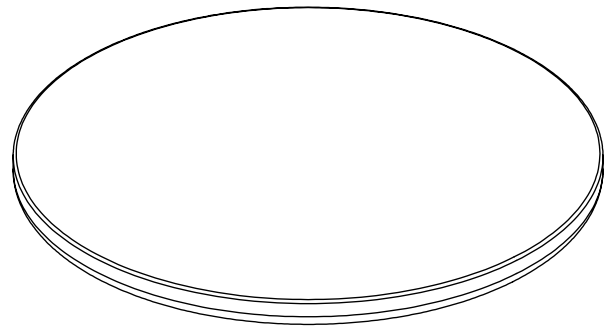


1x

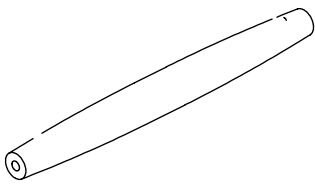


1x

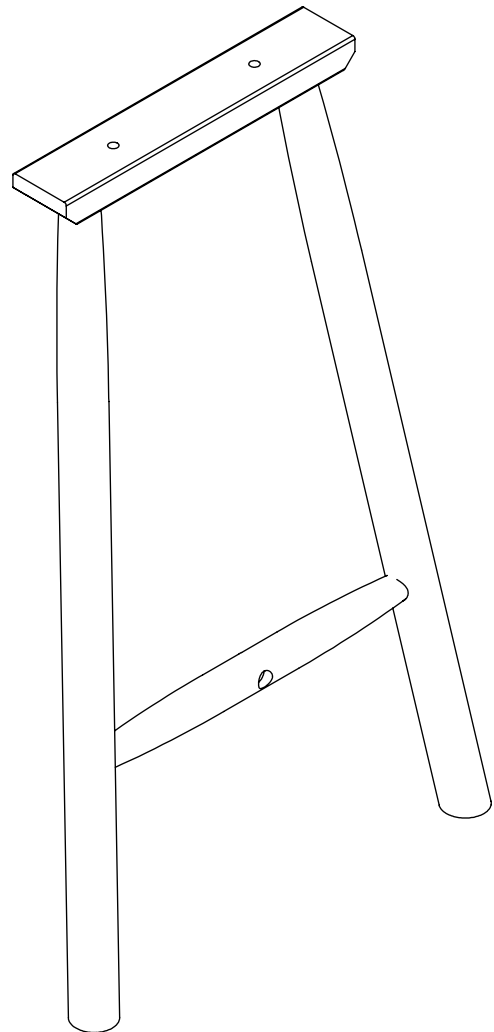


2x

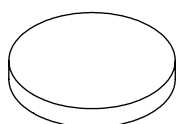


4x
Ø22x3




4x
Ø18x1,5/Ø8

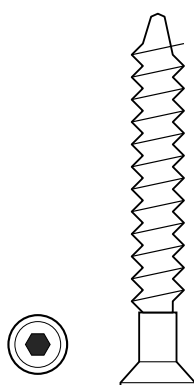


2x
Ø5x50

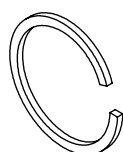


4x

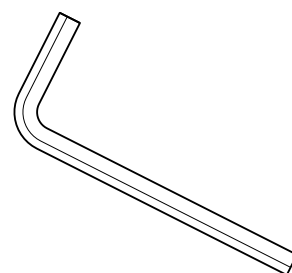

1x
HEX 5



4x
M6x35

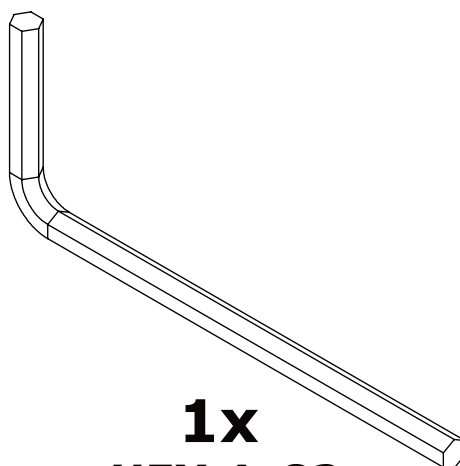





1x
HEX 4x82

IMPORTANT NOTICE




When assembling the chair, only hand-tighten the screws. Assemble all parts and loosely secure the bolts. Once the entire frame is fully assembled, tighten all screws completely.

Remember to check and retighten the screws regularly to ensure stability.

2

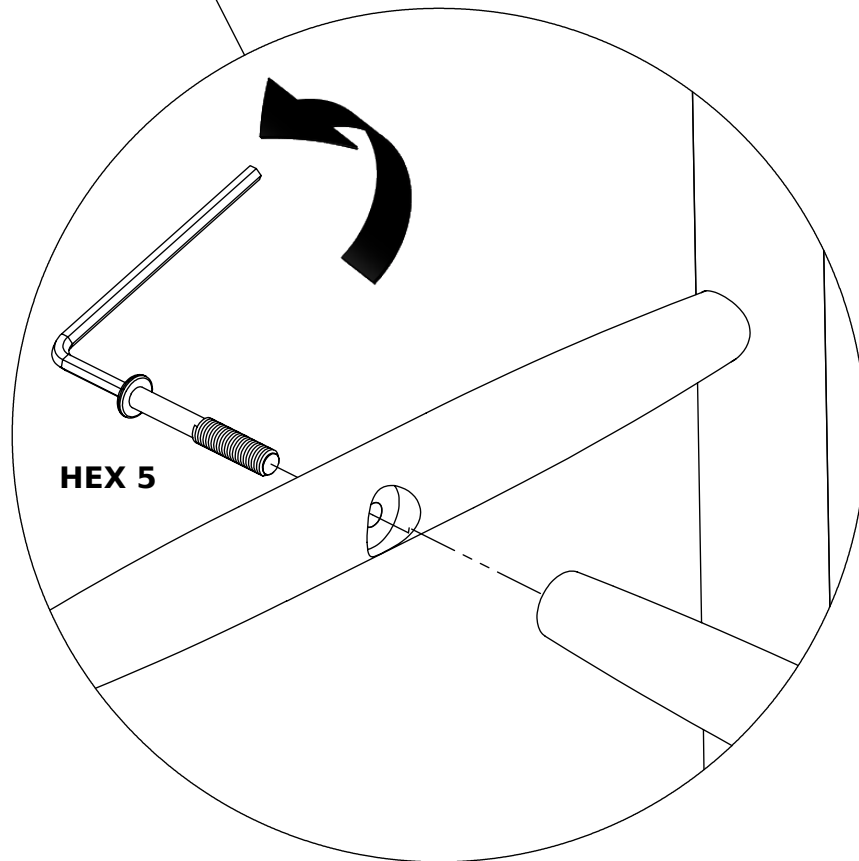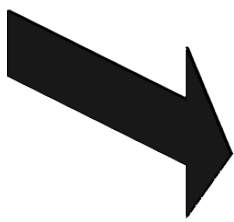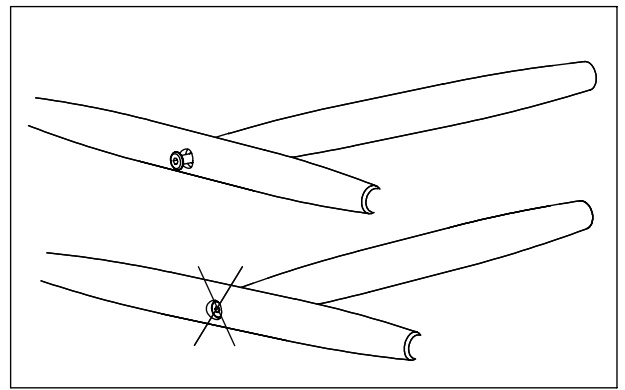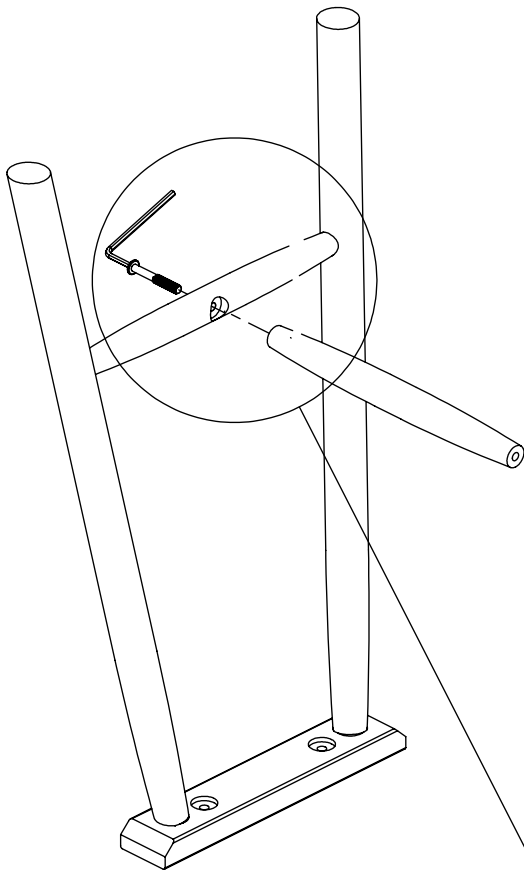




3

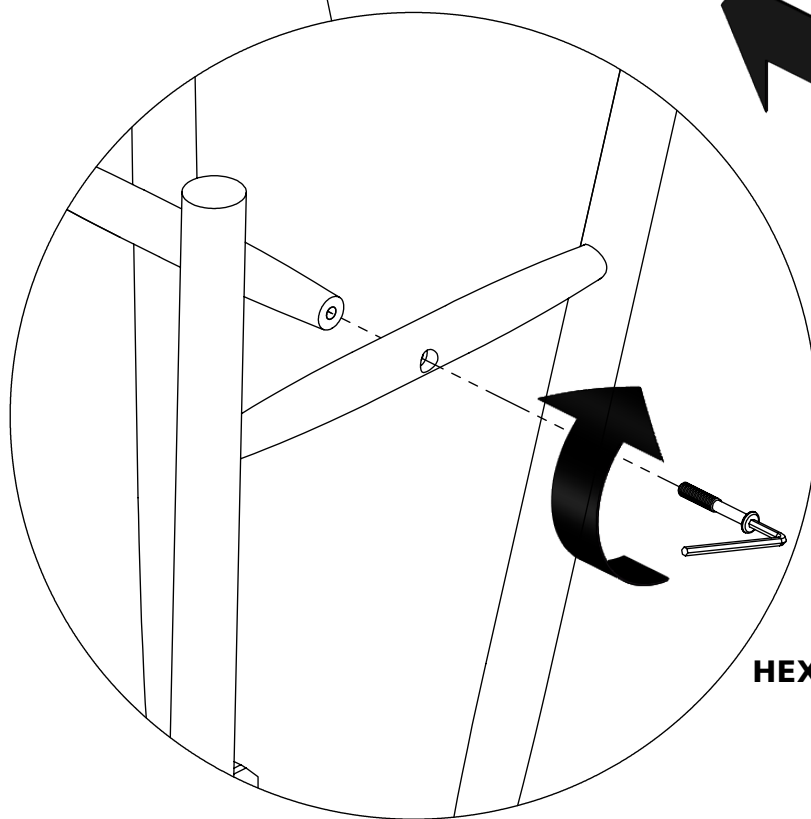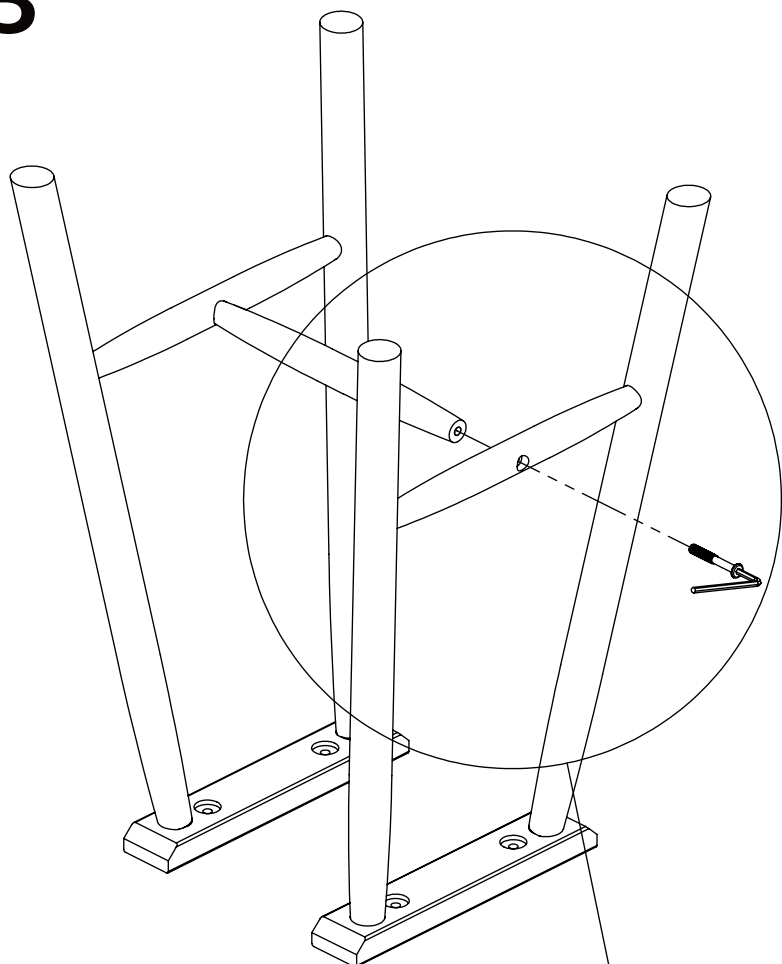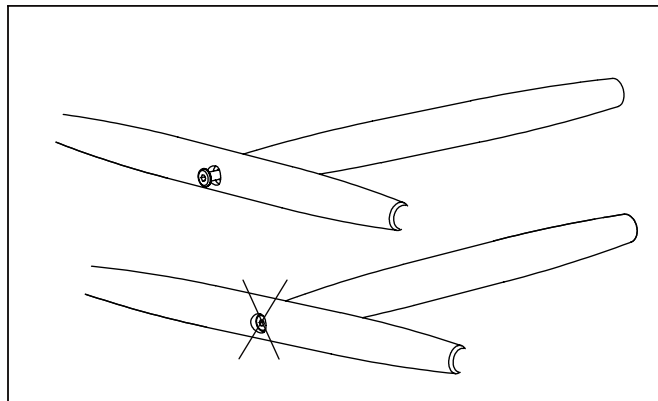


HEX 5

6


4

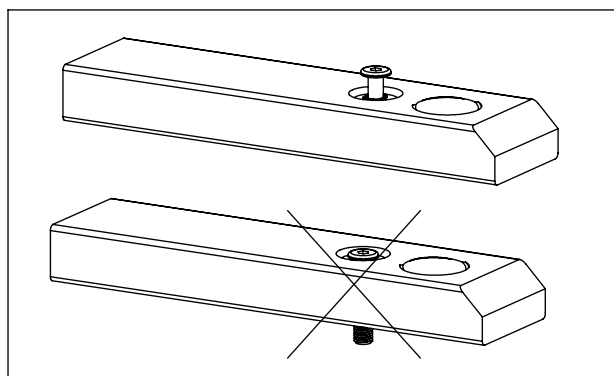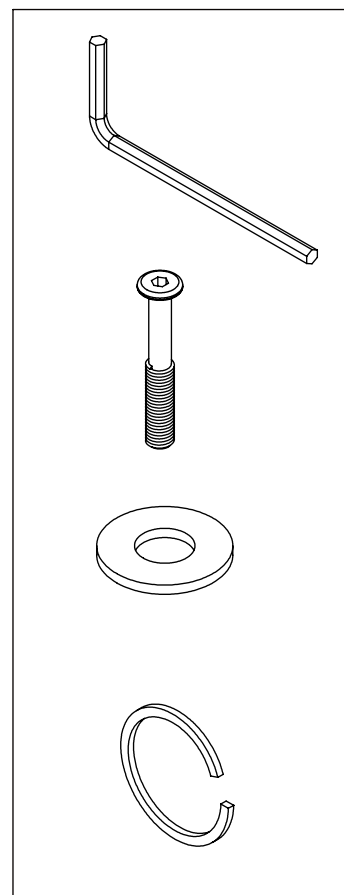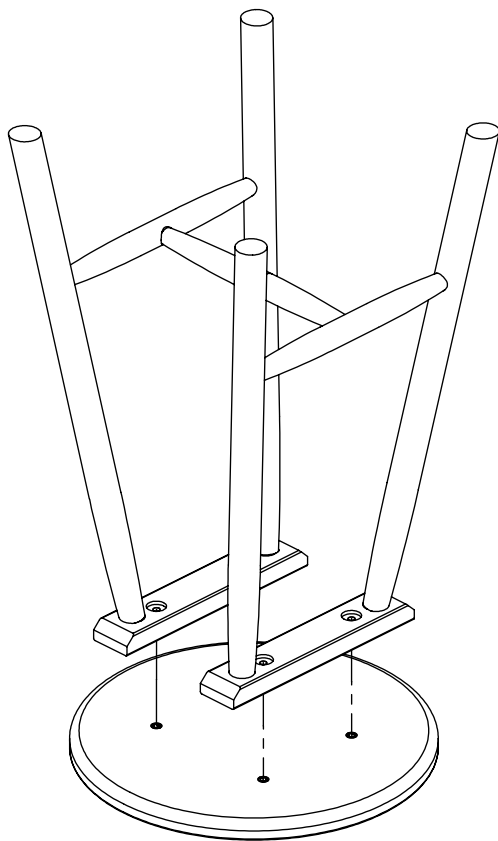

5


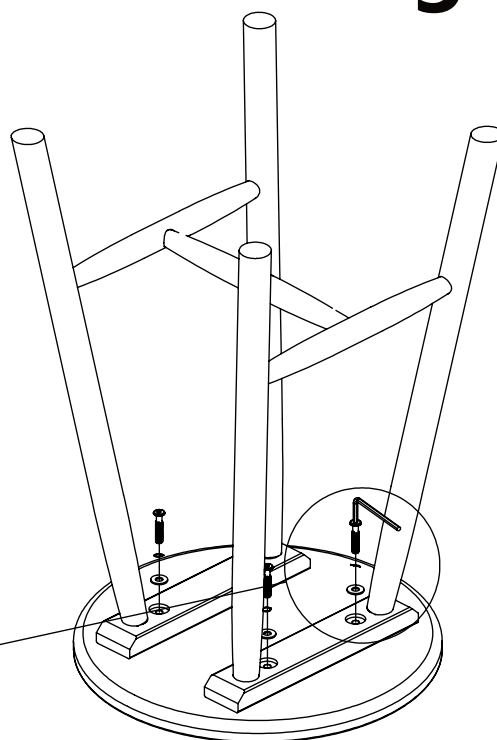


4x

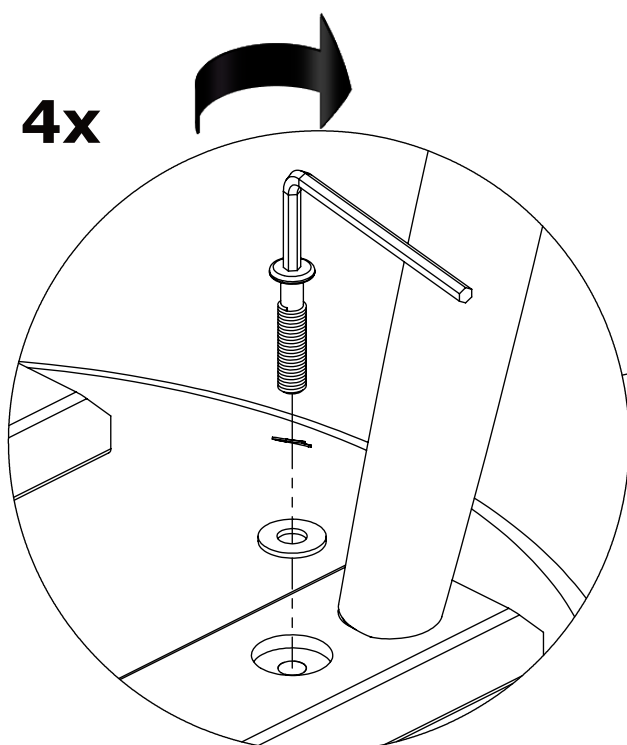


7


6

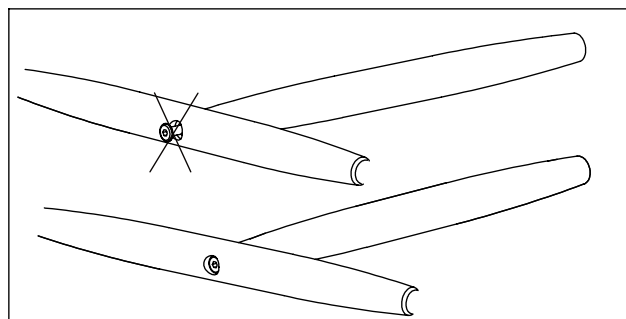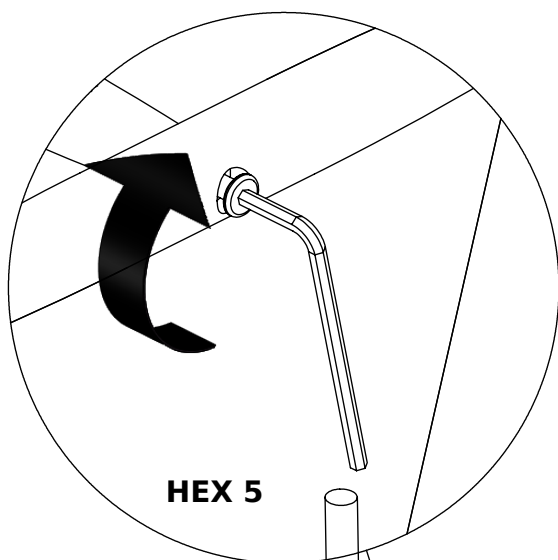


2x

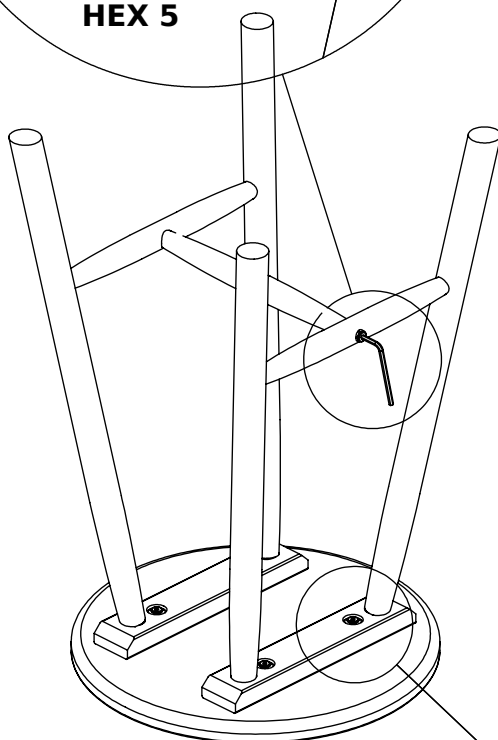

7

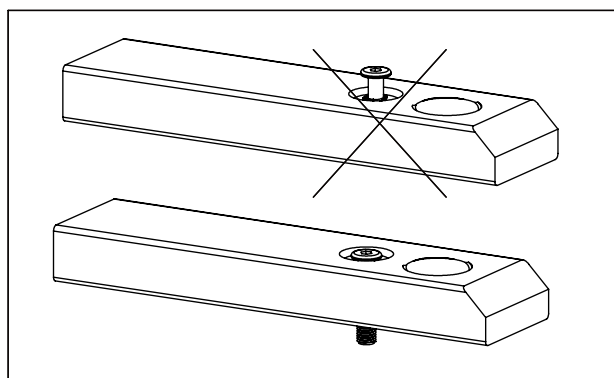

4x

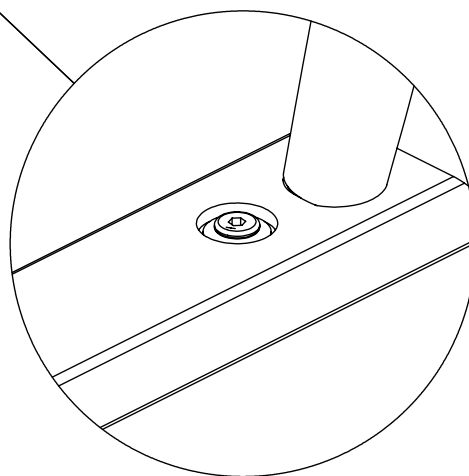

8

