



CARE INSTRUCTIONS

For cleaning the upholstered surface, first try to brush off the dirt gently. If this is not enough then vacuum the surface. If further cleaning of the padding is needed, a stain remover is recommended. The cleaning has to be gentle and must always be tested on the most invisible area of the surface before the actual cleaning. Avoid blotches by gentle, circular rubbing towards the stain.

To avoid stains, quickly remove the dirt with a piece of absorbing household wipe and clean with water and colourless washing-up liquid.

Do not use the following products for the padding:

- Undiluted cleaning liquids.
- Bleach.
- Ammoniac.
- Soap for hard surfaces.

The upholstery fabric on the frame is removable to make it easier to clean. For further cleaning guidance, we refer to information regarding the specific textile.



For enquiries contact GUBI A/S - CVR: 17940384
Klubiensvej 7-9. 2150 Nordhavn. Copenhagen, Denmark
T +45 69 15 60 60 – order@gubi.com
GUBI.COM


69-20-006-05 Assembly Instructions Stay Bed.


GUBI

ASSEMBLY INSTRUCTIONS

for


STAY BED

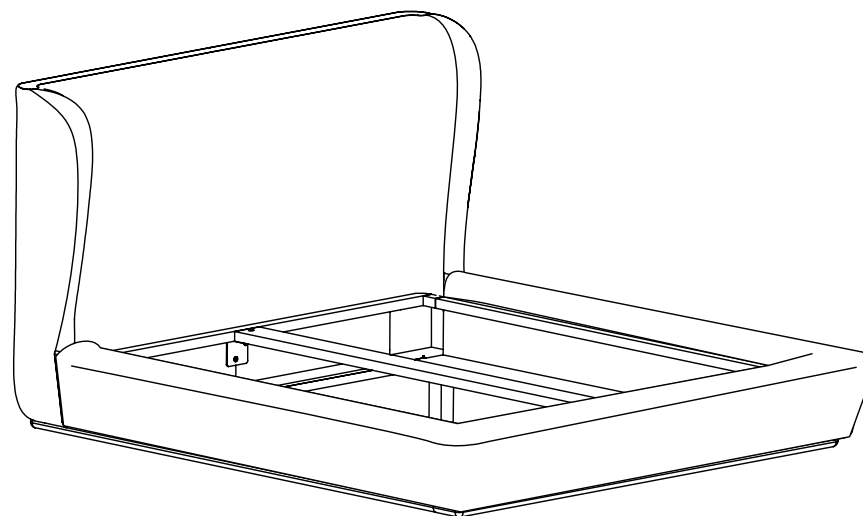

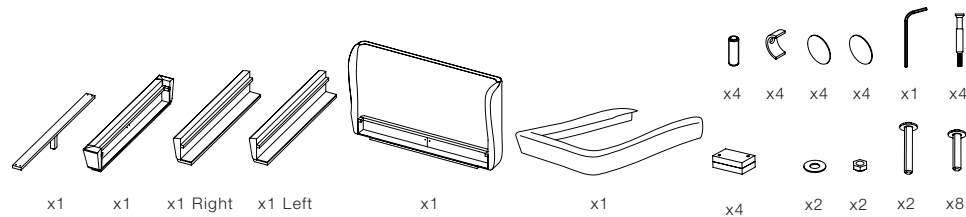


1.

Place 4x wooden dowels into the upper holes in footboard and headboard.

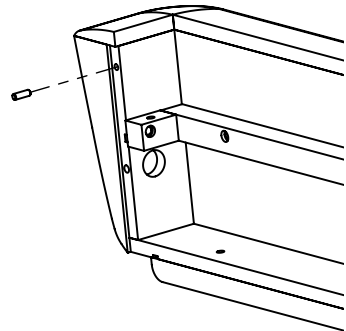


2.

Insert the adjustable bolt and pressing clamp, letting the pin protrude 35mm.

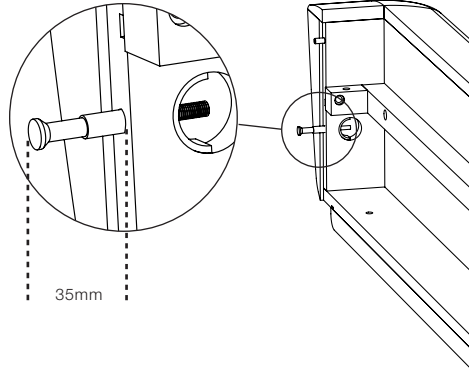


3.

Join the sides to the footboard and tighten with the hex key. Make sure to place the side beam the correct way around, by aligning the black felt pads. Use round plastic caps to cover holes.

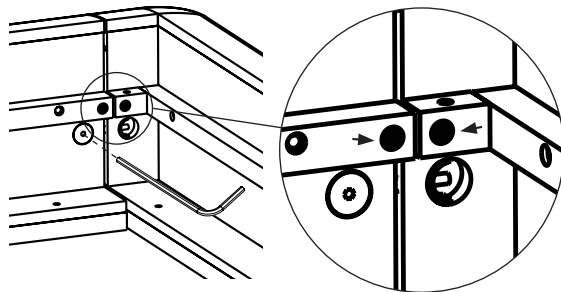


4.

Lift the bed frame onto the 4 blocks.

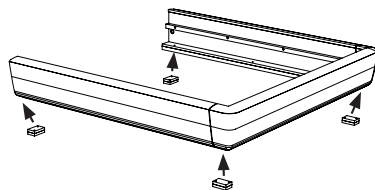


5. Attach the fabric frame cover.

- First align the cover seams with the front corners of the bed frame.
- Attach cover using velcro around the top of the bed frame.
- Attach cover using velcro underneath the bed frame.

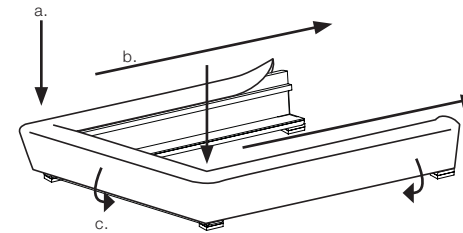


6.

Remove blocks supporting bed frame. Repeat steps 2–3 to attach the headboard to the bed frame.

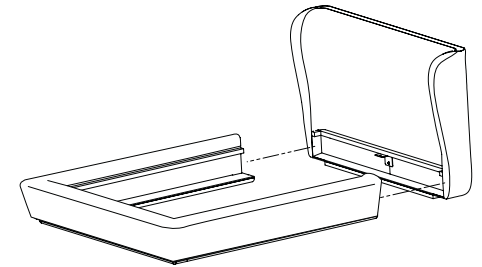


7.

Attach the center beam to the angle bracket with long bolts, nuts and washers.

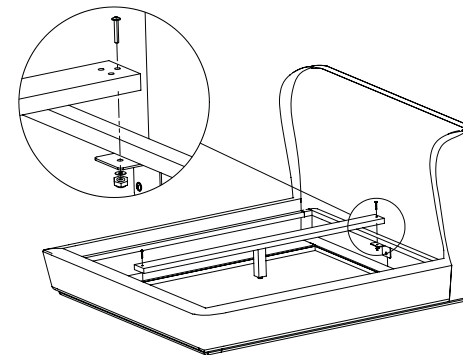

8.

Adjust the height of the supporting foot in the middle so that it touches the floor.

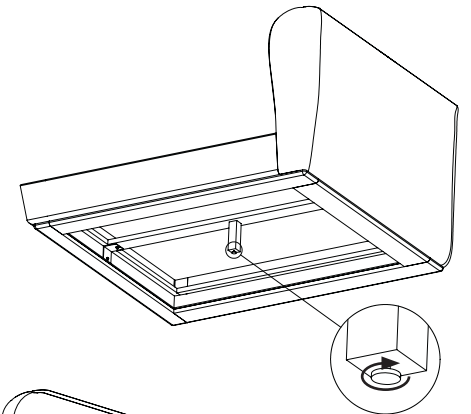

9. (For slatted base)

If using a slatted base, place 8 bolts in holes around the base to prevent movement.

